


Load Cell Lock Removal for BK-Series Scales

1. Assemble the scale using the assembly instructions on the User's Guide that came with the scale. Once you are done, place the scale on the floor and then tilt it on its left side so that you have access to the bottom of the scale. Locate the Load Cell Lock which is indicated by a sticker.



2. The Load Cell Lock (shown inside the red circle to the left) consists of a silver nut and a black hex screw. Both of these must be completely removed before using the scale.

3. Both of these need to be removed.

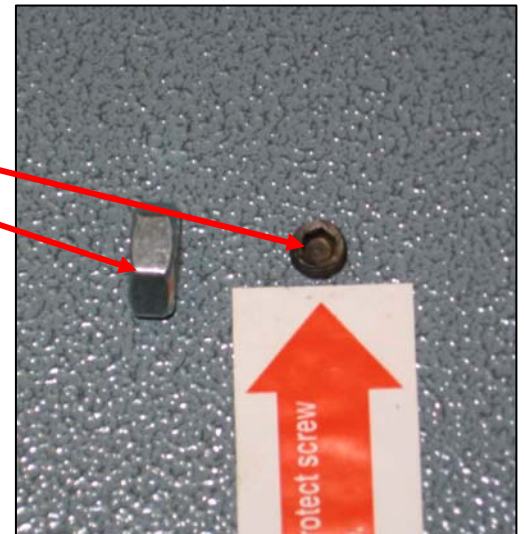

Atron Systems Service Department at 973-227-8882.