

### Auto Shutoff Setting

1. Turn the scale ON and let it go to zero.



*\*Note: The decimal place may vary.*

2. Press and hold down the **MODE** key until the display shows:



3. Press the **UNIT** key repeatedly until the display shows:



4. Press **TARE** and the display should look like this:



5. Press **TARE** and the display should look like this:



6. This number may vary. The number can be 0, 1, 5, or 30 where:


- a. 0 = Never Auto-Shutoff
- b. 1 = Auto-Shutoff after 1 minute idle
- c. 5 = Auto-Shutoff after 5 minutes idle
- d. 30 = Auto-Shutoff after 30 minutes idle

7. Press the **UNIT** key repeatedly to select the desired Auto Shutoff value and then press **TARE**.

8. The display will look like this:



9. Press **TARE**, **TARE**, **TARE**, and then the display will look like this:

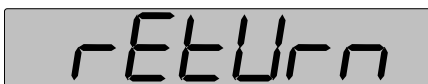

10. Press the **TARE** key and then the display will look like this:



*\*Note: The decimal place may vary.*

11. You are done!

**If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.**