

Sensor Troubleshooter

1. Press **SET**, enter the Password*, and then press **PRINT**.
**Note: The default password is .*
2. Press and the Total Price Display will show the current *Adjust Number* which should be between 20 and 30; 25 is the nominal value.
3. Press **PRINT** the *Label Format Setting* will appear in the Total Price Display.
4. For **LST-8010** labels press **PRINT**; for other labels, see your Owner's Manual. Do **NOT** proceed until you have entered the correct *Label Format Setting*.
5. Press if the scale gives a double-beep then go to **Step 7** otherwise press **PRINT**.
6. Press if the scale gives a double-beep then go to **Step 7** otherwise press **PRINT**.
7. Make sure that the labels are installed correctly and press .
8. In **Step 9** the scale will feed and print several labels. You must remove these quickly as the come out but do NOT yank them out; always remove the printed labels by pulling towards you (the front of the scale) and not to the side.
9. Press (If no labels came out you may need to press again.)
10. Check the values on the LCD Display. The values need to be between 70 and 110.
11. If the **Gap value** is not within range, press **SAVE** and go back to **Step 9** or go to **Step 12**.*
**Note: You may need to repeat this step more than once.*
12. Press **SAVE** **ESC** **ESC** **ESC** **SET**.
13. Press **FEED** and print out some labels. If you do not get the results you desire, you may need to have the scale serviced.

If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.