


PC-100 Percent Tare, $\frac{1}{2}$ $\frac{1}{4}$ Key Programming



1. Make sure that the scale is plugged into a proper outlet, the platter is properly seated, there is nothing on the platter, and that the *Power Switch* is **OFF**.
2. Locate the *CAL Switch* which is under the platter on the front left side. If necessary, remove the *CAL Plate* to expose the *CAL Switch*.

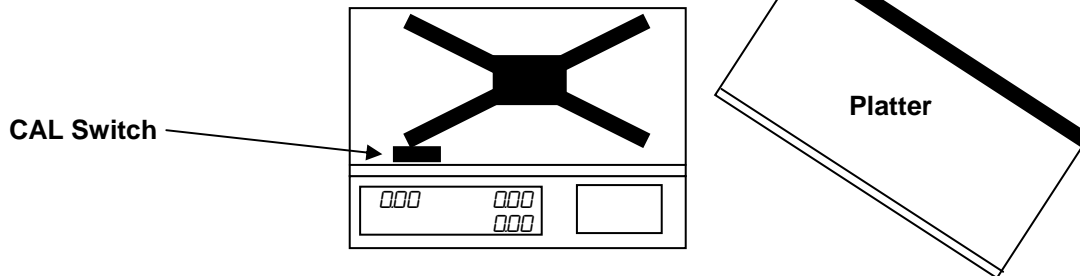

3. Press and hold down the *CAL Switch* as you place the *Power Switch* in the **ON** position.
4. The displays will read: *SPAn SEt*.
5. Press **TARE TARE** and then the display will read: *CoDE*.
6. Now press **C** and the displays will now read: *CoDE 000*.
7. Press **7 7 5 5 9** and the displays will now read: *CoDE 77559*.

8. Press the *** * * * *** (6 times.) The displays will read: *PARA SEtS* and the *Unit Price Display* will have a hexadecimal number in it. Please select only **ONE** of the following options below (refer to the keyboard diagram.)

| Option Description | Keys to press... |
|---|------------------|
| Disable 1/2 & 1/4 keys Disable percent tare feature. | 0 2 * |
| Disable 1/2 & 1/4 keys Enable percent tare feature. | 4 2 * |
| Enable 1/2 & 1/4 keys Disable percent tare feature. | 8 2 * |
| Enable 1/2 & 1/4 keys Enable percent tare feature. | C 2 * |

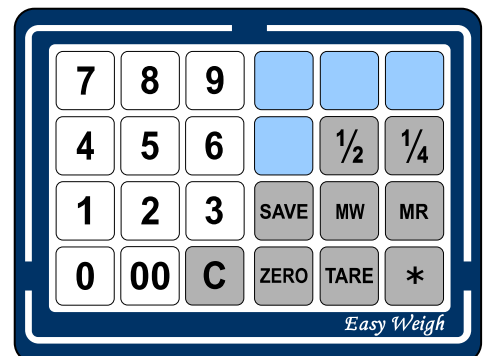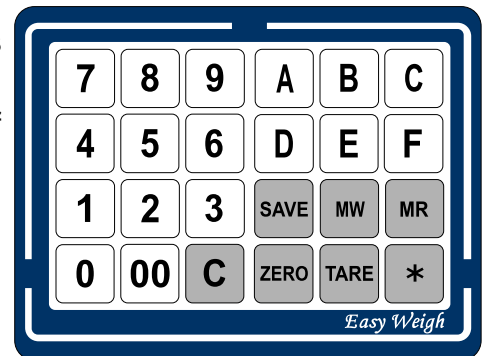

Now the displays will read *End* and then read *SPAn SEt*.

9. Turn the scale **OFF**, and replace *CAL Plate* if necessary. You are done.

If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.