


LS-100 Kilogram Setup

1. Make sure that the scale is plugged into a proper outlet, the platter is properly seated, there is nothing on the platter, and that the *Power Switch* is **OFF**.
2. Locate the *CAL Switch* which is under the platter on the front left side. If necessary, remove the *CAL Plate* to expose the *CAL Switch*.

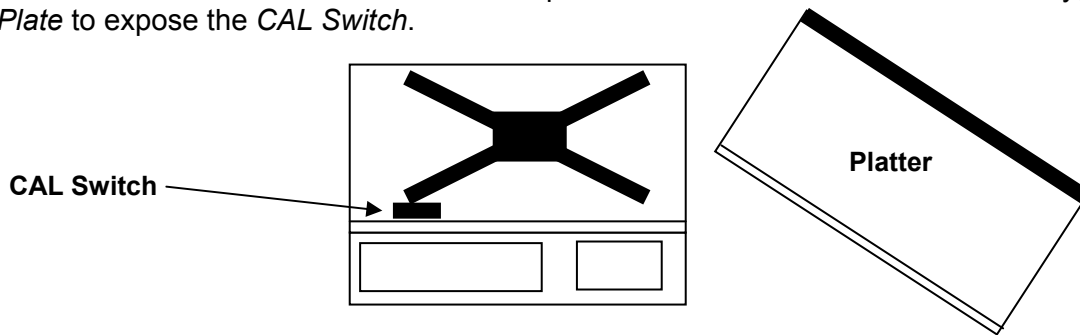

3. Press and hold down the *CAL Switch* as you place the *Power Switch* in the **ON** position.

4. Press the , , and the display will read:

Enter Password

5. Press , , , , , and then **PRINT**.

6. Now press , and the display will read:

Set Unit:

7. **Units:** Press for Kilograms or for Pounds.

8. **Capacity:** Now press for 30 kg or for 60 lb; then press **PRINT**.

9. **Weight Point:** Now press for 0.00 for pounds or press for 0.000 for kilos.

10. **Price Point:** Now select from the following decimal points for the Price displays:

= 0 = 0.0 = 0.00 or = 0.000

11. Now press **SAVE** and then press **ESC** , **ESC** , **ESC** .

12. Now follow the *LS-100 Span Calibration Instructions* and then you are done!

If problems persist, try this procedure again otherwise, please contact the Atron Systems Service Department at 973-227-8882.