


PC-100 Quick Calibrate Instructions

1. Make sure that the scale is plugged into a proper outlet, the platter is properly seated, there is nothing on the platter, and that the *Power Switch* is **OFF**.
2. Locate the *CAL Switch* which is under the platter on the front left side. If necessary, remove the *CAL Plate* to expose the *CAL Switch*.

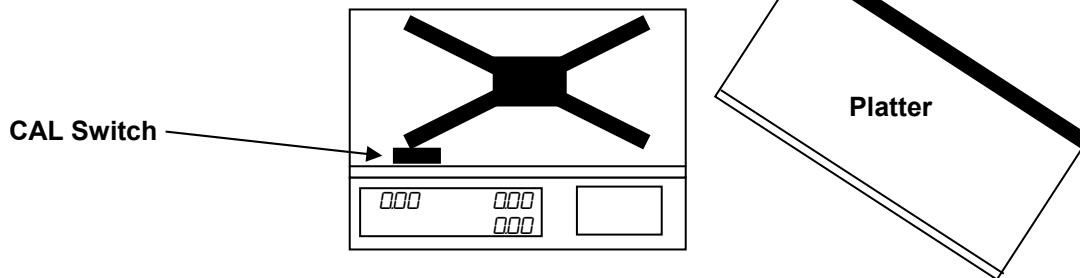

3. Press and hold down the *CAL Switch* as you place the *Power Switch* in the **ON** position.
4. The displays will read: *SPAN SET*.
5. Press and then the display will read: *ZERO*.
6. With nothing on the platter, press the key. The display will now read: *FULL*.
7. You can calibrate with 60 lb (30 kg) or 30 lb (15 kg). You may use kg weights if the scale is set up for kg weighing.
 - a. Place 60 lb on the platter and then press the key. The displays will show: **OR** *rEAd*, then *End*, and finally *SELF tEST*. Proceed to **Step 8**.
 - b. To calibrate with 6 pounds press and the display will read: *Part 10*
To calibrate with 12 pounds press and the display will read: *Part 20*
To calibrate with 30 pounds press and the display will read: *Part 50*
Place the amount of weight you have selected to calibrate with on the platter and then press the key. The displays will show: *rEAd*, then *End*, and finally *SELF tEST*.
8. Remove all weight from the platter, turn the scale **OFF**, and replace *CAL Plate* if necessary. You are done.

If you encounter any problems you may want to do this procedure again or the *PC-100 Main PCB Programming* procedure and then attempt the *PC-100 Quick Calibrate* once more.

If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.